

# Simplecom®

## RT250 2.4GHz Wireless Remote Air Mouse Keyboard and Touch Pad

### User Manual



*Simplify Your Life*

[www.simplecom.com.au](http://www.simplecom.com.au)


## Features

- 3-In-1 Universal 2.4G Air Mouse, Keyboard and Touch Pad
- Nano USB Receiver, transmission distance up to 10 meters
- Built-in 6-axis gyroscope air mouse control
- Built-in Touch Pad with Multi-Finger Operation Support
- Designed with universal function keys\*, work for PC, Mac and Android TV Box
- Replaceable and rechargeable Lithium battery
- Backlight on both front and keyboard side, easy to use at night
- Plug and play, no software or driver needed
- Compatible with Windows, macOS, Linux, Android systems

## Specifications

- Model: RT250
- Sensor: 6-axis (3 Gyroscope + 3 Accelerometer)
- Communications: RF 2.4GHz Wireless
- Number of keys: 63
- Number of IR learning keys: 1 (Power Key)
- Touch Pad: high sensitive multi-finger touchpad
- Backlight: Two sides Front and Keyboard Backlight
- Working Distance: 10m
- Wireless Frequency: 2.400-2.483Ghz
- Operating current: <22mA
- Standby current: <20uA
- Battery: 300mAh rechargeable Lithium battery
- Charging Port: Micro USB
- Dimension: 172x50x15mm
- Weight: 130g
- System Support: Windows XP and above, Android (4.0 and above), macOS, Linux

## Product

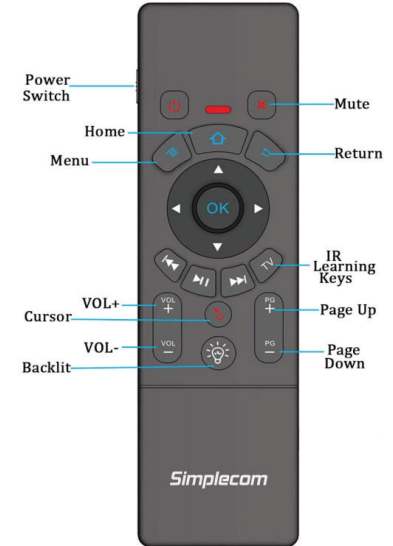

### Functions Keys (Front)

**Home:** Go back to home menu

**Return:** Go back to previous screen

**Cursor:** to lock and unlock the mouse cursor

**Backlit:** to turn on and off the backlight of the remote

**Power:** IR learning key to learn TV or Android box power key

**TV:** IR learning key to enter IR learning mode

### Functions Keys (Keyboard)

**ALT:** Numeric and special characters switch  
(click once to switch between letter and special characters)

**SHIFT:** hold to switch uppercase or lowercase

**CAPS:** Caps Lock

## | Operation

### • IR Learning for Power Key

Please note **POWER** key is the only IR learning key on RT250

1. Press and Hold TV Key for more than 3 seconds until red indicator starts flashing quickly, red indicator will flash slowly after you released TV Key.
2. Point your IR remote to top IR section of RT250 , press the power key on your IR remote
3. The red indicator on RT250 will stop flashing and steady on if learning is successful
4. Press the Power Key on RT250, the red indicator will flash slowly
5. Press TV key to finish the IR key learning

### • Re-Sync Remote with USB receiver

1. Unplug the USB Receiver from PC or other device
2. Press the "OK" and "TV" Keys, the blue indicator will flashing
3. Plug the USB Receiver back to PC or other device
4. The blue indicator will stop flashing if pairing is successful

### • Touchpad Operation

1. Tap by one finger: left mouse click
2. Tap by two fingers: right mouse click
3. Slide by two fingers: Page scroll up and down

## | Troubleshooting

### Q: The remote doesn't work

- 1) Check the power switch on side of the remote and make sure it's on
- 2) Check the USB receiver is properly plugged on PC or other device, change to a different USB port if necessary
- 3) Check the battery if it need to recharge

### Q: My TV doesn't support this remote

Not all TV use Android based system, the remote only support Android based smart TV, also some TV with heavily modified Android system may have issue with this remote.

### Q: The mouse cursor is not moving

Press the Cursor key in front, check if it's in locked status

### Q: The mouse cursor is moving to slow or fast

Press "HOME and VOL+" or "HOME and VOL-" to adjust the cursor speed

### Q: How to reset the remote?

Press "OK and BACK" buttons for 3 seconds

## | Package Contents

- 1x RT250 Remote
- 1x USB 2.0 Receiver
- 1x USB Charging Cable
- 1x User Manual

## | Warranty

This product includes one (1) year repair/replacement warranty provide by Simplecom Australia. This warranty is non-transferable and is limited to the original purchaser.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For our assistance with regards to warranty please email to [support@simplecom.com.au](mailto:support@simplecom.com.au) or create a support ticket at <http://www.simplecom.com.au>

© Simplecom Australia All Rights Reserved. Simplecom is a registered trademark of Simplecom Australia Pty Ltd. All other trademarks are property of their respective owner. Specifications and external appearance are subject to change without notice. Warranty and technical support covering this product are only valid in the country or region of purchase.

 [www.simplecom.com.au](http://www.simplecom.com.au)  [support@simplecom.com.au](mailto:support@simplecom.com.au)